



TOUCH 247
USER GUIDE
V2.1.7



Visionpoint™ Touch Screens Ltd
Rowley House, The Quay, Poole, Dorset, BH15 1HL, United Kingdom
Technical Support: +44 (0) 845 224 3714
Fax: +44(0) 1202 674 387
www.touch247.com

Copyright and Trademarks

Copyright © 2008 Visionpoint™ Touch Screens Limited. All rights reserved.

Any technical documentation made available by Visionpoint Touch Screens Ltd (hereinafter called 'Visionpoint') is the copyright work of Visionpoint and wholly owned by Visionpoint.

Other brands and product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Disclaimer

Visionpoint accepts no liability for any loss of data or the ability of Touch247 to work with equipment, nor can Visionpoint accept any liability or responsibility for software which is non-compliant.

However, Visionpoint in continuance of product improvement and customer satisfaction will without prejudice, and where possible, support the integration of Touch247 onto non-compliant hardware or software.

Should you have any queries or comment please contact the Visionpoint Support helpdesk:

United Kingdom	International
0845 224 3174 (calls charged at local rate)	+44 (0) 845 224 3714 (international rates apply)

The information contained in this document and the software to which it relates is subject to change without notice. If you find any problems with the document or software please report them to Visionpoint. Visionpoint does not warrant that this documentation or software is error free.

Contents

Copyright and Trademarks	2
Disclaimer	2
INTRODUCTION	5
The Touch247 Software	5
Touch247 and Show247	5
Installation	5
USING ADMIN247	6
THE ADMIN247 SCREEN	6
1. The General Page	6
2. The Import Page	8
3. The Messages Page	10
4. The Featured Items Page	11
5. The View Statistics Page	11
6. The Branding Page	12
USING DATABASE247	15
The Database247 Screen	15
1. The List Page	15
2. The Add Page	15
3. The Edit Page	16
Database Administration Options	18
Backup Database	18
Restore Database	18
Unlock Database	19
Select Database	19
USING TOUCH247	21
The Touch247 Screen	21

Figures

Figure 1 The General Screen	6
Figure 2 The Search Question Dialog	7
Figure 3 The Search Question Edit Dialog	7
Figure 4 The Categories Dialog	8
Figure 5 The Database Location Dialog	8
Figure 6 The Import Options Screen	9
Figure 7 The Import Options Screen Displaying the Progress Bar	10
Figure 8 The Messages Screen	10
Figure 9 The Messages Screen	11
Figure 10 The Featured Items Screen	11
Figure 11 The View Statistics Page	12
Figure 12 The Branding Screen	12
Figure 13 The Background Colour Screen	13
Figure 14 The Advertisement Screen	13
Figure 15 The Property List Screen	15
Figure 16 The Add Property Screen	16
Figure 17 The Edit Property Screen	17
Figure 18 Delete Image	17
Figure 19 The DB Backup Warning	18
Figure 20 The Select Backup Window	18
Figure 21 The Unlock Property Window	19

Figure 22 The Browse for Database Location Dialog	20
Figure 23 The Touch247 Sales Screen	21
Figure 24 The Touch247 Lettings Screen	22
Figure 25 The Search Screen (Price)	22
Figure 26 The Search Screen (Property)	23
Figure 27 The Search Results Screen	23
Figure 28 The Property Details Screen.....	24
Figure 29 The Contact Us Screen	24
Figure 30 Entering Contact Details.....	25
Figure 31 The Confirmation Popup Dialog	25

INTRODUCTION

This user guide is for administrators of the Touch247 software.

The Touch247 Software

The Touch247 software is comprised of three elements. The first, Touch247, resides on a dedicated PC that drives the projector and thus the display screen. The second and third elements, Admin247 and Database247, can reside anywhere on a local network.

- (a) **Touch247** - The Touch247 application presents property details in an interactive format that enables passers-by to access information using innovative through-the-glass technology, and to leave messages expressing interest.
- (b) **Admin247** - The Admin247 application is used to perform administration functions, which includes the import of industry standard data in the RightmoveTM format. This element also contains basic setup functions and facilities to brand the Touch247 display.
- (c) **Database247** - The Database247 application allows all users on a local network to add, view and edit data.

Touch247 and Show247

The database used to hold the property information is common across both Touch247 and Show247 (the non-interactive version). This is deliberate and allows a single site to run both applications simultaneously (on different equipment), perhaps with one in the window and one inside the shop, both accessing the same database.

The Admin247 and Database247 applications are therefore common to both the Touch247 and Show247 products. Throughout this guide the various screen shots will occasionally show options that are specific to Show247 and thus not applicable to Touch247. Where these occur it will be pointed out in the text but the functionality will not be described. These options are described fully in the Show247 User Guide.

Installation

The Touch247 software is supplied on a CD. To install the software:

- (a) Make sure all open applications are closed prior to beginning the installation.
- (b) Insert the CD into the CD-ROM drive of your computer.
- (c) The installation wizard will start and display the install menu.
- (d) Click on 'Install Software' to begin installation of the Touch247 software.
- (e) Follow the on screen instructions until the setup has completed.
- (f) Once complete the Touch247, Database247 and Admin247 applications can be started from icons located in the Start menu or on the Desktop screen.
- (g) If the installation wizard does not start automatically, go to 'Start' followed by 'Run' and type in d:\setup.exe (where d: is your CD-ROM drive).

The Installation Guide supplied with Touch247 CD describes the installation process in detail.

USING ADMIN247

Admin247 allows the administrator to customise the look and feel of the content that is displayed on the Touch247 screen. It also allows the user to import property files from a known source, view messages that have been left by potential customers, view activity statistics for the preceding six month period and brand the appearance of Touch247, each which is described in the sections below.

To start Admin247 select the Admin247 entry from the 'Start' menu program group or double-click on the icon on the Desktop or in the Quick Start group (depending on the installation options chosen). This program can be closed at anytime by clicking on the 'X' (exit) icon located on the top right of the screen or by selecting File on the top menu and then Exit.

THE ADMIN247 SCREEN

The screen is displayed with six navigable buttons situated on the left side ('General', 'Import', 'Messages', 'Featured Items', 'View Stats' and 'Branding'). Selection of each button displays a different administration page, each of which is described in the sections below.

1. The General Page

This page allows the administrator to manage the presentational of the Touch247 screen (Figure 1).

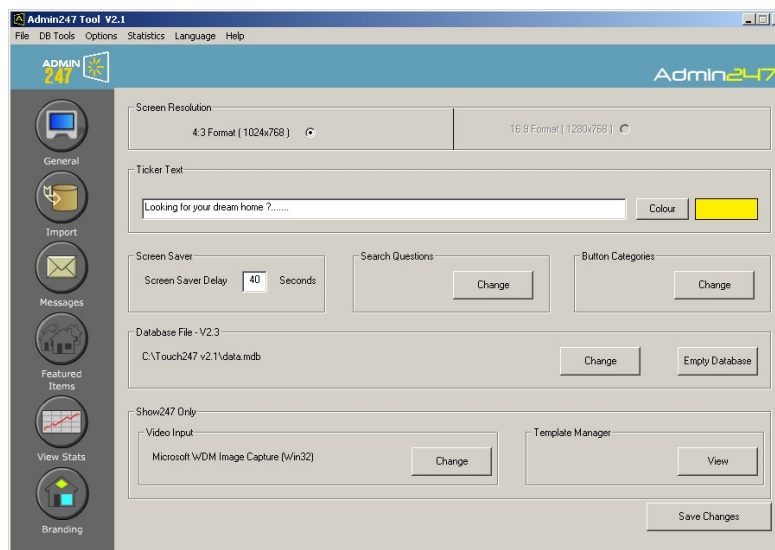


Figure 1 The General Screen

At the top of the page is the 'Screen Resolution' field, which allows the user to set the size of the Touch247 screen (4:3 (1024 x 768) or 16:9 (1280 x 768). The default setting for this is 4:3 (1024 x 768).

The 'Ticker Text' field is used to create a scrolling marquee and to select the required colour for the text. The scrolling marquee is displayed at the top of the Touch247 screen. If this is not required then the field should be left blank.

The default screen saver delay time is set to 40 seconds but can be changed to any desired time. This is the time that Touch247 waits after a period of inactivity before showing the screen saver.

The 'Search Questions' facility is used to change the search text and criteria that Touch247 uses when the user selects the Search button on the main screen.

Each Category (e.g. Sales, Lettings) has a number of questions that appear in sequence when the user searches in that category. Each question has a title, description and a number of options, from which the user can choose. These are the visible parts of the question (shown in Figure 2).

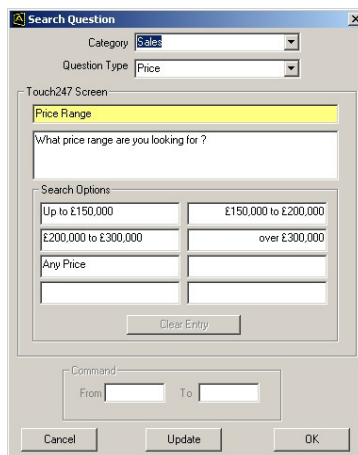


Figure 2 The Search Question Dialog

In addition to the visible elements of each question (the text on the screen and the buttons), each option that the user can select has a corresponding database query that is used by Touch247 to filter the list of properties for display. The combination of all the questions for a Category and the options selected by the user will give the final list of properties that match the criteria.

To change the search criteria first click on the required 'Search Options' text box and enter the words/values for the option. This text will be displayed on the appropriate button on Touch247 search screen. Then change the command values to match your text (Figure 3).

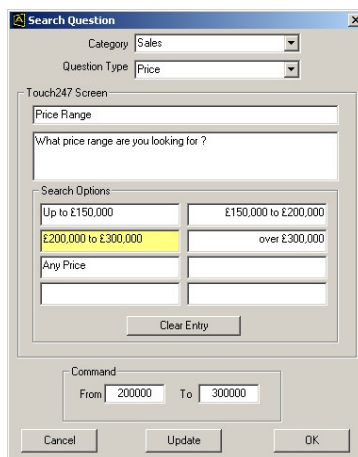


Figure 3 The Search Question Edit Dialog

Up to 8 search options can be specified for each question. If fewer options are required then individual entries can be removed by selecting Clear Entry button.

The 'Button Categories' option is used to define the property categories; for example 'Sales' and 'Lettings'. The name of the categories is used for the text on the buttons on the left hand side of

the Touch247 screen, as shown in the screen (Figure 4). Each button has a maximum of 11 characters. To change the text of a button simply select it and enter the required value. If you require only one category for example 'For Sale' then the other field should be left blank. The text for the Search button cannot be changed.



Figure 4 The Categories Dialog

The 'Database File' field is used to specify the location of the database. By default this will be set up to be in the installation directory. Selecting the 'Change' button displays a dialog through which a new database file can be specified (see Figure 5).

Database files have a file type of '.mdb'. Associated with each database file is a directory of all the associated pictures. This is named 'media' and should be located in the same parent directory as the database file. For example, Figure 5 shows the database file residing in the directory C:\Touch247. The media directory must therefore be C:\Touch247\media for the pictures to be located by Touch247.

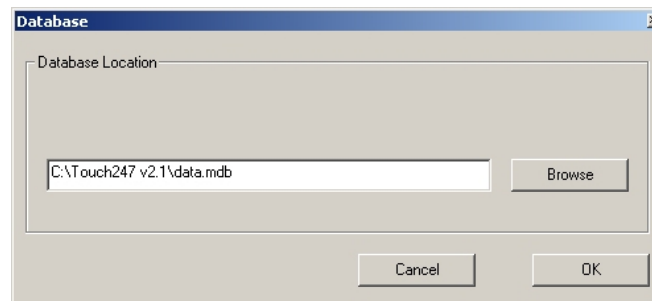


Figure 5 The Database Location Dialog

The remaining field, 'Show247' is used purely in conjunction with the Show247 software and is not covered in this manual.

Once editing has been completed the 'Save Changes' button should be selected. This will display a dialog that confirms the changes have been saved.

2. The Import Page

The Import page is used to populate the Touch247 database from an external data file, such as a Rightmove 'blm' file (see Figure 6).

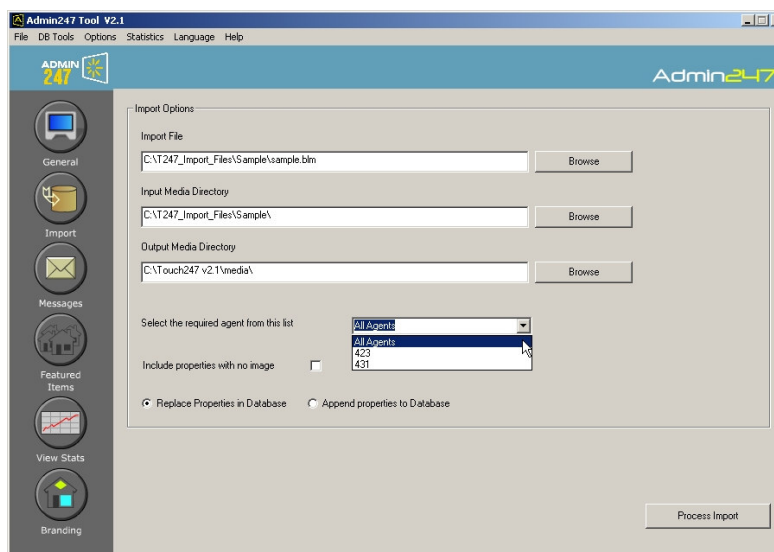


Figure 6 The Import Options Screen

There are a number of import options, as follows:

- **Import File** – This field is used to import the textual content of the properties. The file format used (.blm files) is the same format that is used with websites such as www.rightmove.co.uk. Access to the files is achieved by clicking on the 'Browse' button and navigating to the applicable file.
- **Import Media Directory** – This field is used to import the image files associated with the text file described above. This field automatically populates when the text files are imported, however this can be configured manually if required.
- **Output Media Directory** – This field is pre-populated on installation and unless it needs to change should remain as set (please discuss with your supplier about editing this field).
- **Select Required Agent from List** - This field has a drop down menu that enables the administrator to select data from all branches or just from a sole branch. Note that most installations will normally only use data from the branch where Touch247 is installed.
- **Include Properties with no Image** – This checkbox should be selected if properties that do not have an image attached are required to be imported.
- **Replace Properties in Database** – This radio button should be selected if all the existing entries in the database are to be deleted as part of the import.
- **Append Properties to Database** – This radio button should be selected if the imported data is to be appended to the existing contents of the database.

Changes will not be made until the 'Process Import' button is selected. The time required to load the data will depend on the number of properties involved and the number of images. A progress bar is presented to gauge the time (Figure 7).

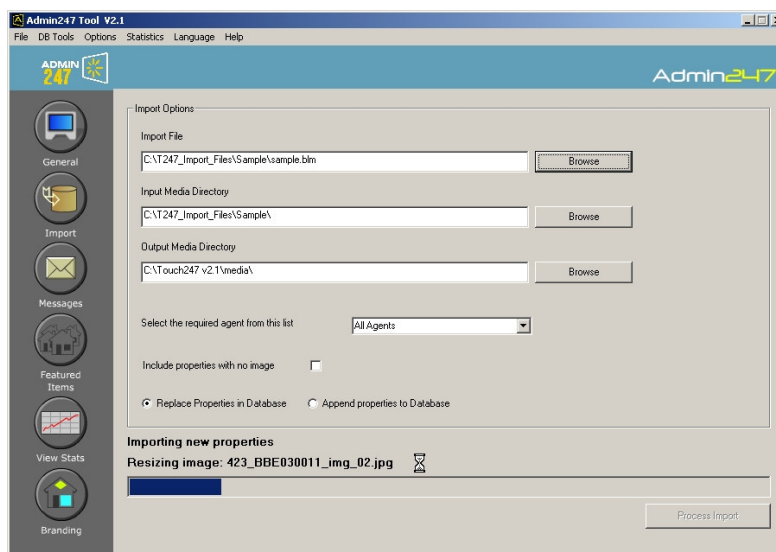


Figure 7 The Import Options Screen Displaying the Progress Bar

3. The Messages Page

This page is used to display all messages that have been left by potential customers on the Touch247 'Contact Us' screen (Figure 8).

Selection of the 'Refresh List' button will update the screen with all the latest messages.

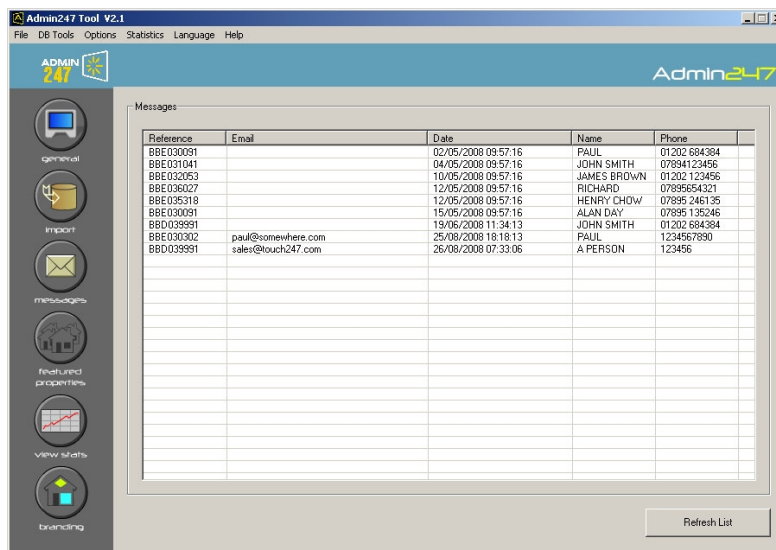


Figure 8 The Messages Screen

Double-click on any of the message lines will display a dialog screen to enable printing or deleting the details. (Figure 9)

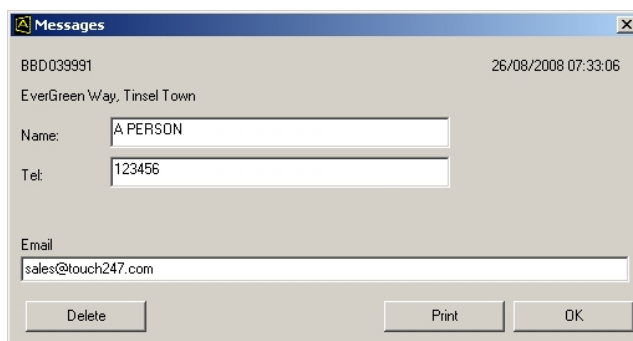


Figure 9 The Messages Screen

4. The Featured Items Page

This page shows all the properties that are in the database and a 'Featured List' which shows those properties that are displayed on the Home page of the Touch247 screen for the selected Category.

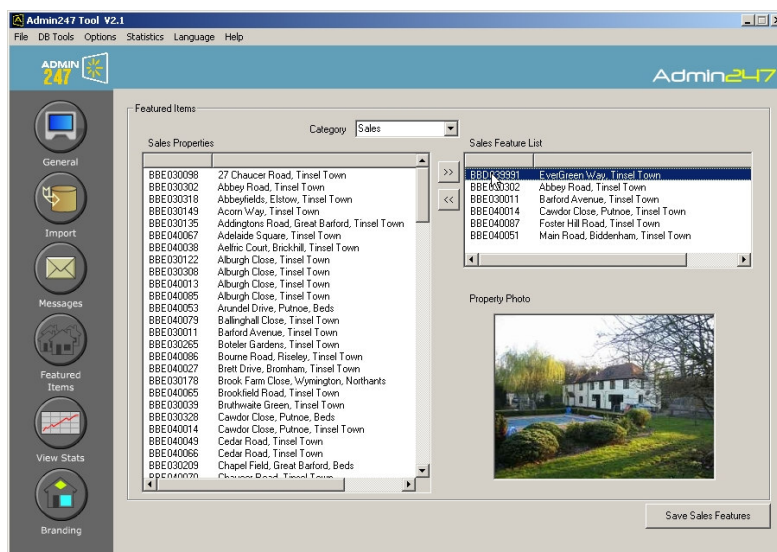


Figure 10 The Featured Items Screen

The Featured List can be updated at any time by first selecting the category and then selecting the required properties from the full list of properties on the left of the screen and clicking on the 'Add' (>>) button. Similarly properties can be removed from the Featured List by using the 'Remove' (<<) button. Note that the Featured List can only contain a maximum of 6 properties for each category.

5. The View Statistics Page

This page displays the viewing statistics for the system, which are colour coded as follows:

- Red – represents the number of detailed views during a given month.
- Green – represents the number of messages left during a given month.
- Yellow – represents the number of in depth searches completed during a given month.

Moving the mouse pointer over the column will show the statistics in more detail.

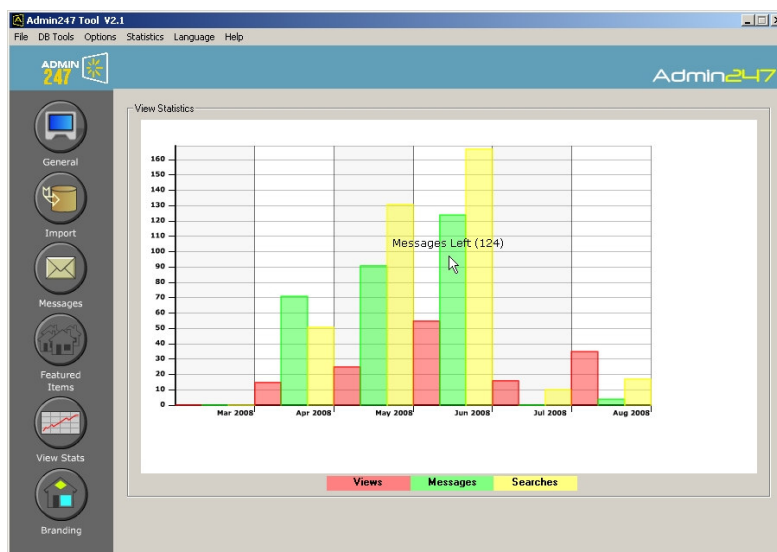


Figure 9 The View Statistics Page

6. The Branding Page

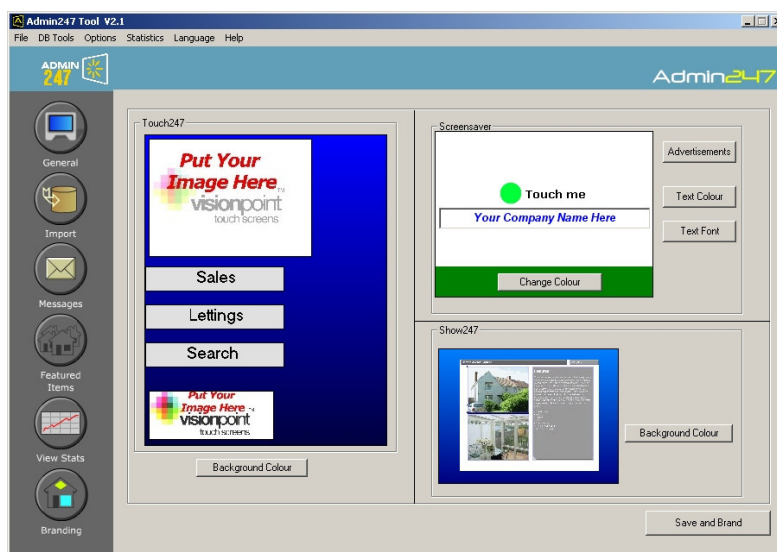


Figure 12 The Branding Screen

The branding of Touch247 consists of three parts: the background colour, the top image and the bottom image. The background colour can be changed by clicking on 'Background colour' button. This will display the background dialog (Figure 13)

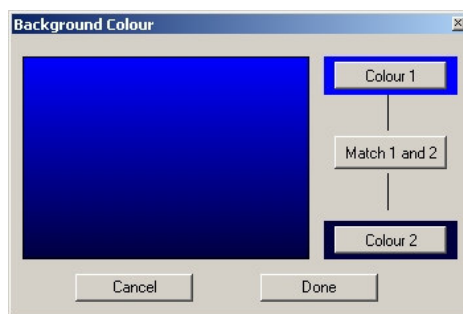


Figure 13 The Background Colour Screen

The background can be a single colour or a graduation between two colours. Clicking on the Colour1 or the Colour2 buttons will show the colour picker from which the desired colour can be selected.

To change the top or bottom image simply drag the desired image from anywhere in the file system and drop it over the Touch247 image area.

The Screensaver consists of three parts: featured properties, moving hand with Touch me & strap line and a selection of advertisements. The sequence is as follows - the first of the top six featured properties is displayed full screen followed by the moving hand & touch me screen. Then the next featured property is displayed, again followed by the moving hand & touch me screen. After all the featured properties have been displayed this way, this process is then repeated, but displaying the advertisements in place of the featured properties. The Advertisements screen is described in the sections below.

The strapline text field is used to display what ever you choose under the pulsing dot and touch me text. To change the text, simply select the text and type. Selecting the Text colour button will show the colour picker from which the desired colour can be selected. Text Font button will show the font dialog from which the desired font, size etc., can be selected. Change Colour button on the bottom colour band will show the colour picker from which the desired colour can be selected.

The Advertisement button will show the Advertisement screen, a total of six advertisements can be defined. The advertisements are jpeg images (see Figure 14).



Figure 14 The Advertisement Screen

To change an advertisement simply grab the desired image from anywhere in the file system and drop it over the image area. The duration for the featured property and advertisement to be displayed is determined by the value in the Seconds box.

The Enable option either selects the advertisement to be displayed or not. To remove the advertisement completely simply click on the image and press the delete (Del) key.

The Show247 element only applies to the Show247 software and thus is not covered by this user guide.

Once editing has been completed the 'Save and Brand' button should be selected. This will display a dialog that confirms the changes have been saved.

If a different page of Admin247 is selected before any changes have been saved then a dialog will appear offering the option to save, to discard changes, or to cancel the change of page.

For more advanced branding and screensaver information see the file Touch247_Branding.pdf located in the installation folder under interface\branding\documentation, there you will also find Adobe Flash templates (.fla) files.

USING DATABASE247

Database247 allows users on an local network to add, view and edit individual details for display on the Touch247 screen

To start Database247 select the Database247 entry from the 'Start' menu program group or double-click on the icon on the Desktop or in the Quick Start group (depending on the installation options chosen). This program can be closed at anytime by clicking on the 'X' (exit) icon located on the top right of the screen.

The Database247 Screen

The screen is displayed with three navigable buttons situated on the left side ('List', 'Add' and 'Edit'). Selection of each button displays a different database administration page, each of which is described in the sections below.

1. The List Page

This page shows all the properties that are loaded in the database.

Most fields are self-explanatory, however the 'Display' column indicates if the property has been selected for display in Show247.

Double clicking on any property in the list will display its details in the 'Edit Property' page (Figure 15).

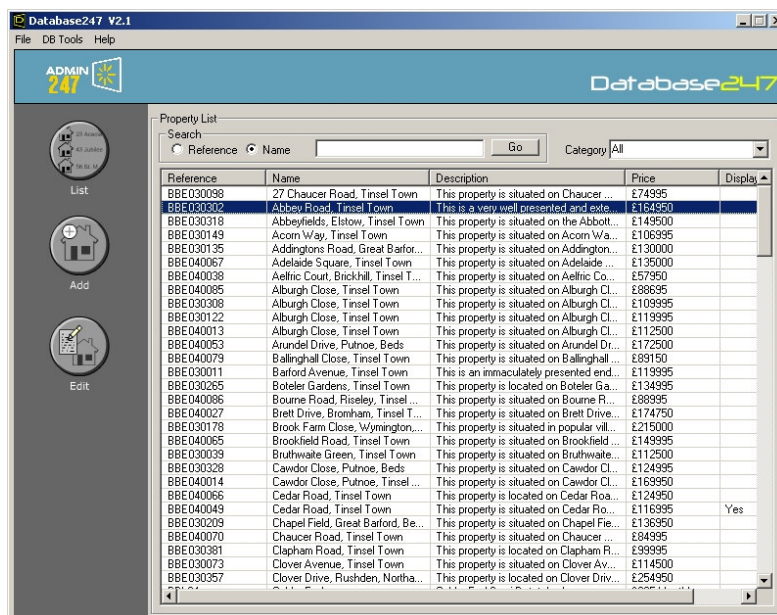


Figure 15 The Property List Screen

At the top of the page is a search facility that can be used to find properties by their reference or name. Simply select the Reference or Name option and then enter the search word or partial word into the search field and click the 'Go' button. This filters the list and displays just those properties which match the search term. To return to the full list clear the search field and click the 'Go' button again.

2. The Add Page

This page allows a new property to be manually added into the database. (Figure 16) The page is also accessible from the 'New' option found in the 'File' menu.

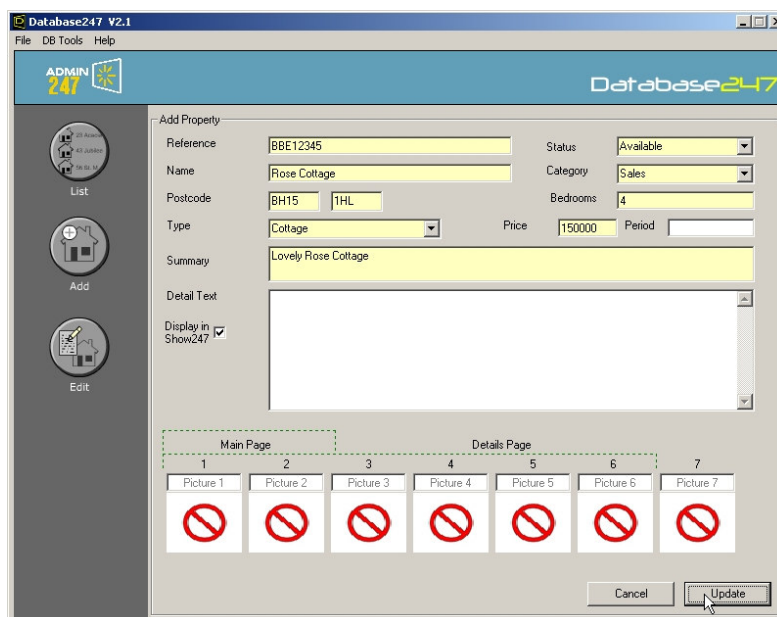


Figure 16 The Add Property Screen

The screen is made up of several fields which allow details to be entered or values to be selected from relevant dropdown lists.

The 'Display in Show247' checkbox is only applicable to the Show247 software and is not covered in this guide.

Note that at this stage photo images cannot be added as indicated by the icon displayed in the image placeholders. Images are added using the 'Edit Property' page.

Once the basic details have been added clicking the 'Save' button will save the property to the database. Note all the fields with yellow background are mandatory.

3. The Edit Page

This page is displayed by selecting the 'Edit' button (Figure 16) or when an individual property is selected in the Property List page, and allows the user to edit the details of properties held in the database. The page is also accessible from the 'Edit' option found in the 'File' menu.

This page is similar to the 'Add Property' page but with the additional functionality that allows the user to select images for display on the Touch247 screen. This is achieved by dragging a desired image from anywhere on the computer disk and dropping it onto the required placeholder. The title of the picture is the text that appears on the button on the property details screen of Touch247 that is associated with picture.

If the property is in the list of featured properties (i.e. it appears on the main screen for a particular category) then the first two pictures will be the ones that are displayed (displayed alternately) on the main screen.

Once editing is complete clicking the 'Save' button will save the changes to the database.

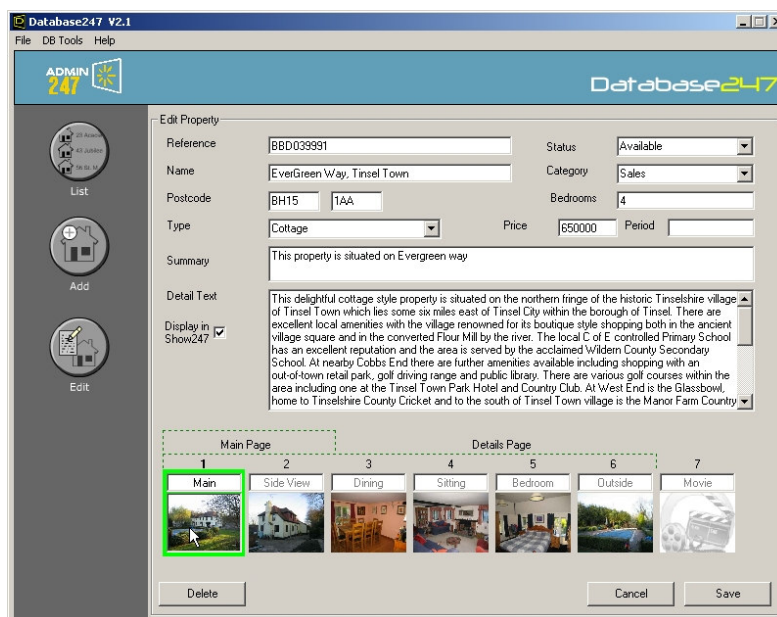


Figure 17 The Edit Property Screen

As with the 'Add Property' page the 'Display in Show247' checkbox is only applicable to the Show247 software and is not covered in this guide.

To remove an image simply select the image then press and hold the Control (Ctrl) key and click the right mouse button. A dialog will be displayed confirming your actions. See Figure 18

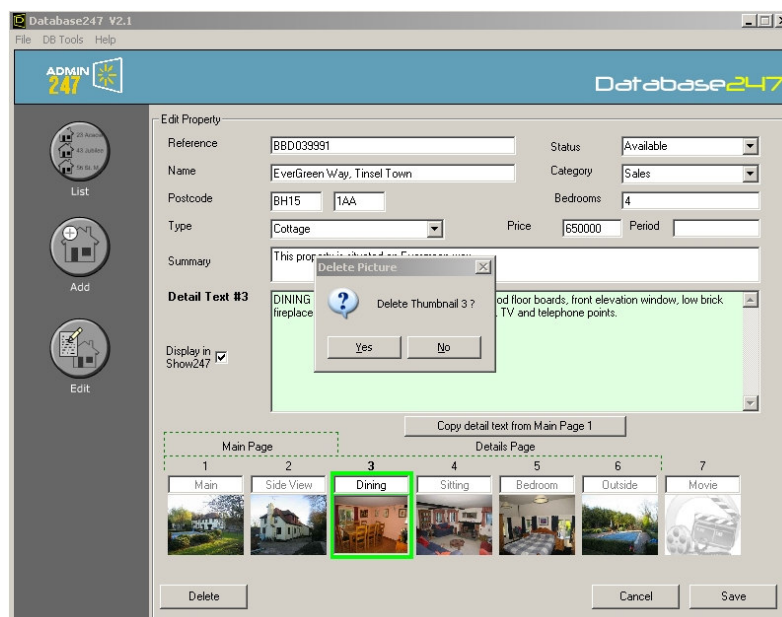


Figure 18 Delete Image

The movie placeholder is applicable only to Show247 and is not covered in this guide.

Database Administration Options

There are various database administration options available, which are accessible from the DB Tools menu. These are:

- Backup Database
- Restore Database
- Unlock Database
- Select Database

Backup Database

A backup of the database can be performed at any time by selecting the 'Backup Database' option from the 'DB Tools' menu. Each file that is backed up is time stamped with the date and time.

When a backup is completed a dialog is displayed with the message "Backup Successful".

In the event that the database is in use at the time a backup is attempted a warning dialog will be displayed (Figure 19).

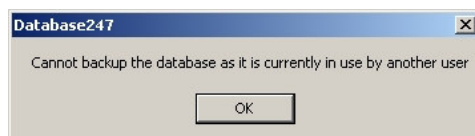


Figure 19 The DB Backup Warning

Restore Database

The restoration of a backed up database can be performed at any time by selecting the 'Restore Database' option from the 'DB Tools' menu.

Selection of this option will open a browse window that allows the user to navigate to the folder from where the restore is to be made (Figure 20). Selecting the backup file and clicking the 'Open' button will then restore the database.

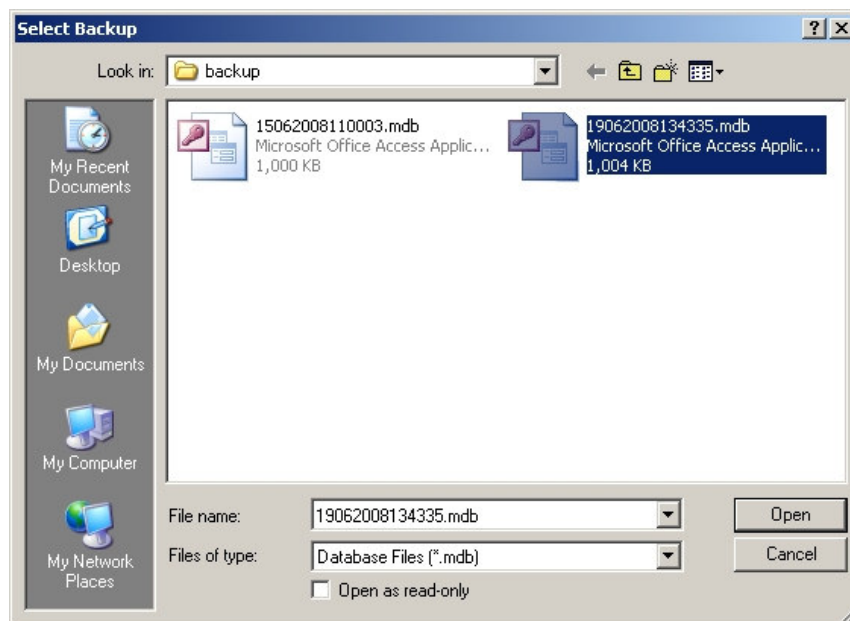


Figure 20 The Select Backup Window

Unlock Database

As the database can be used by more than one user at a time, when a property is being edited it gets marked as locked to prevent any other user from inadvertently changing the data at the same time.

If a user doesn't exit the program in a proper manor then the record can be left in a locked state. If this is the case the property in the database can be unlocked by selecting the 'Unlock Database' option from the 'DB Tools' menu.

This action displays the 'Unlock Property' screen (Figure 21). Selecting the locked property on this screen and clicking on the 'Unlock' button will place the property in an unlocked state, which then allows it to be edited as normal.

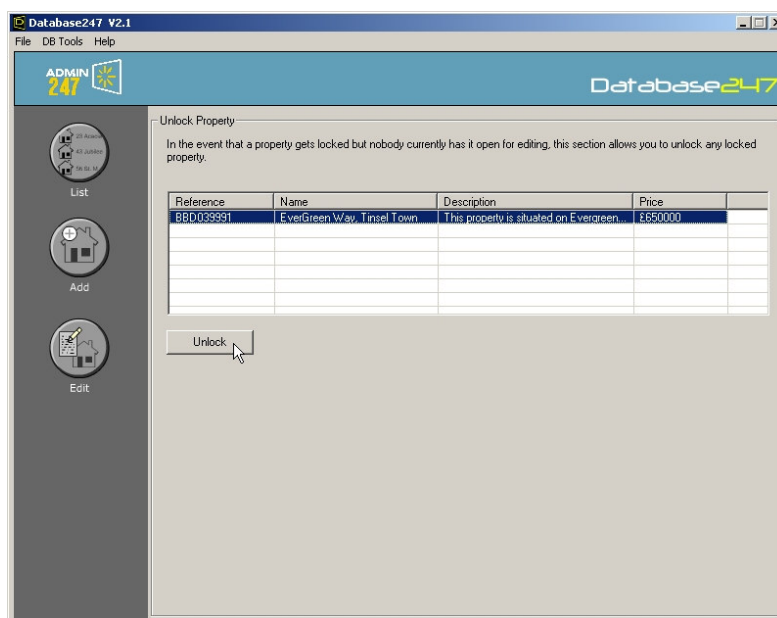


Figure 21 The Unlock Property Window

Select Database

The Admin247 and Database247 are often run on a PC that is separate to the PC used to run Touch247. In addition, there may be more than one Touch247 application, or indeed copies of Show247 running in an agency, each of which can have a separate database.

The 'Select Database' option allows the user to choose which database to administer. Selecting this option displays a dialog that allows the user to either enter a file path to the database or to browse for the database via a browse window (see Figure 22).

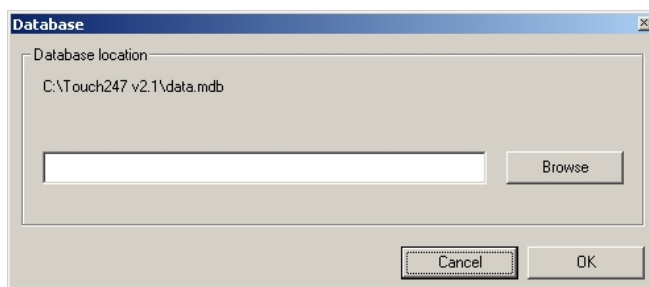


Figure 22 The Browse for Database Location Dialog

Selection of either the 'OK' button in the 'Database Location' dialog or the 'Open' button in the browse window (assuming a correct file path or database has been selected) will open the database for editing as required.

USING TOUCH247

To start Touch247 select the Touch247 entry from the 'Start' menu program group or double-click on the icon on the Desktop or in the Quick Start group (depending on the installation options chosen). The program can be exited at anytime by pressing the 'Escape' button on the keyboard.

Please note that at start up there is no cursor present on the screen. This can be toggled on by pressing the 'Caps Lock' button on the keypad. If a touch screen is connected then the cursor should be off as the normal selection of on-screen functionality is achieved by the user touching the screen.

In the text and figures that follow the configuration of the display and the branding is the default presentation that is part of the installation. If the display of Touch247 has been configured differently (text, logo, categories) and specific customer branding applied then the screen may look very different from the figures below.

The Touch247 Screen

The main screen displays up to three buttons ('Sales', 'Lettings' and 'Search') and six individual property views, each showing an image and summary of a property (see Figure 23).

Touching the 'Sales' button takes the user from any screen they may be using back to this main screen of the 6 featured properties for Sales, shown in Figure 23.

Touching the 'Lettings' button takes the user from any screen they may be using back to this main screen of the 6 featured properties for Lettings, shown in Figure 24.

Touching either the picture of a particular property or its summary text will display the full details of the property (Figure 28)



Figure 23 The Touch247 Sales Screen



Figure 24 The Touch247 Lettings Screen

Touching the 'Search' button displays the first in a short sequence of screens that enable the user to search for properties based on the criteria selected. The type of properties displayed by the search will depend on the type of properties featured when the search was started. If the Lettings properties were featured, as in Figure 24 above, then the search operation will search properties to let. If Sales properties were featured then the search will look for properties for sale that match the chosen criteria.

The first search screen displayed enables selection of a preferred price range (Figure 25). Once selected, a further screen is displayed that enables selection of the type of property required (Figure 26). At any stage the user can navigate back to amend choices by touching the 'Back' button, or cancel the search by touching the 'Sales' or 'Lettings' button.



Figure 25 The Search Screen (Price)



Figure 26 The Search Screen (Property)

The set of screens below show the results of a search, which are displayed six properties at a time, with the option to move forward ('Next') or move back ('Previous').

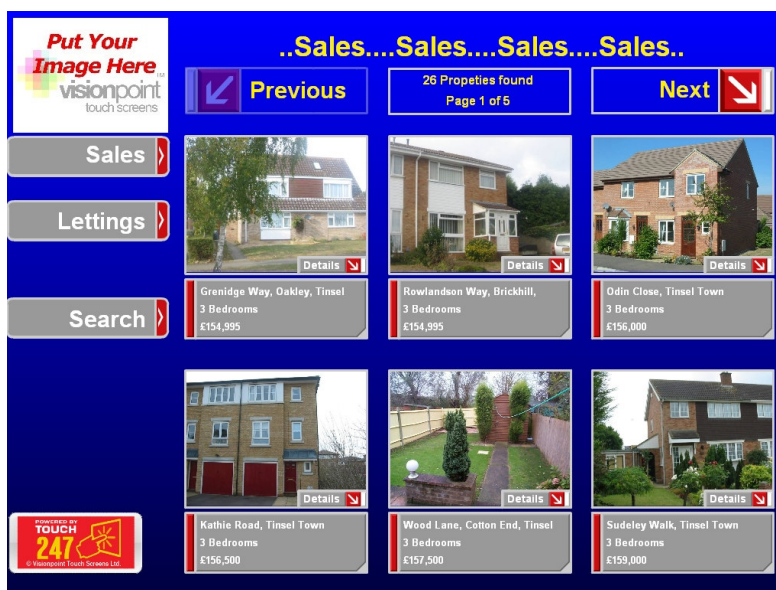


Figure 27 The Search Results Screen

To gain more information on a property the user can touch the property's picture or the details. This will display a screen that gives in depth features of the property and the option to view further images (Figure 28).

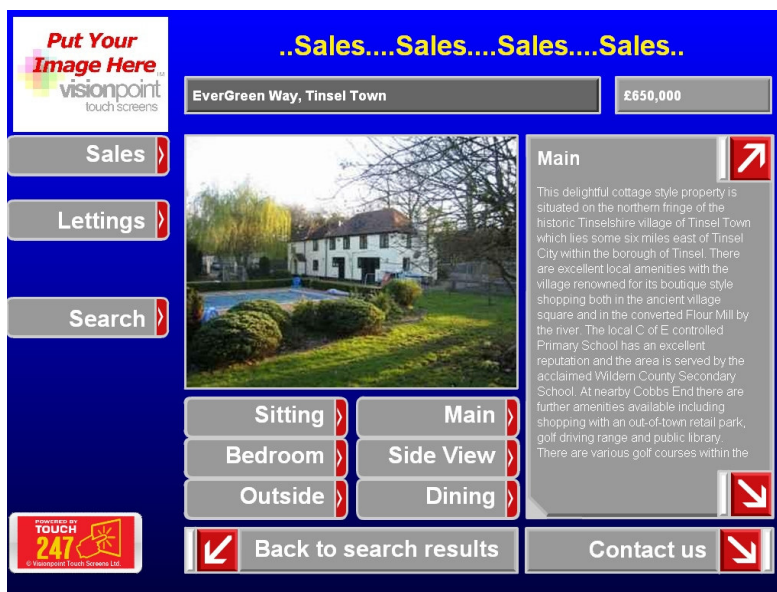


Figure 28 The Property Details Screen

The description column on this screen can be scrolled up or down by touching the relevant arrow. If more than one picture is available for the properties then the buttons below the picture area become active. Selecting one of these will show the appropriate picture and any associated text.

At any stage the user can navigate back to the results of the search by touching the 'Back to search results' button.

Selection of the 'Contact us' button displays a screen that allows the user to leave their contact details regarding the property that they have selected (Figure 29).

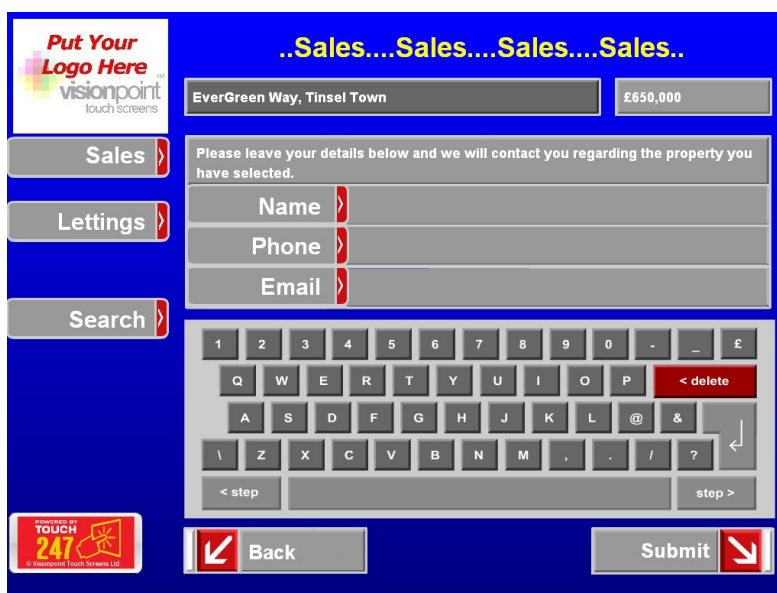


Figure 29 The Contact Us Screen

Information is entered by touching the keys of the interactive keypad to complete the 'Name', 'Phone' and 'Email' fields. Note all fields except 'Email' is mandatory (Figure 30).

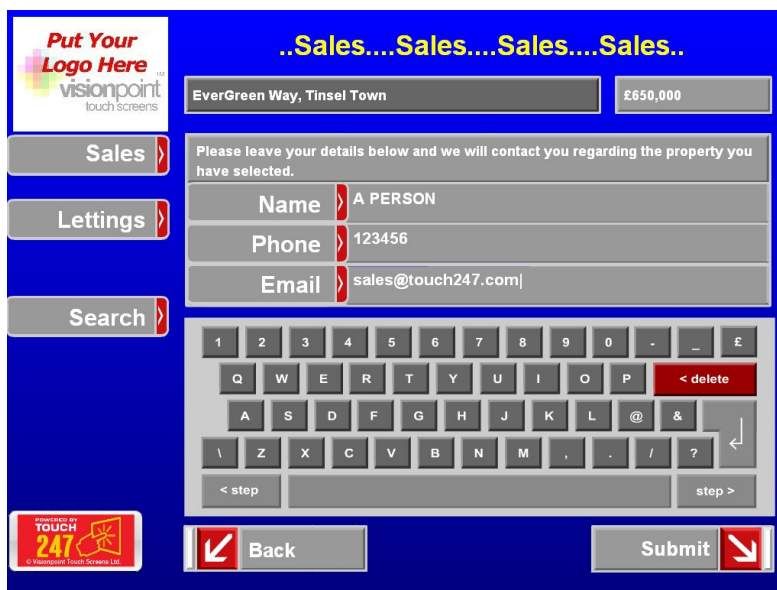


Figure 30 Entering Contact Details

When the user has finished entering their contact details, touching the 'Submit' button will complete the process. This is indicated by a popup dialog (see figure 31). Touching 'Continue' will take the user back to the property details screen.



Figure 31 The Confirmation Popup Dialog